

mokiinternational.com

Moki International all rights reserved

Made in China



The *Bluetooth*™ word mark and logos are registered trademarks owned by *Bluetooth*™ SIG, Inc. and any use of such marks by Moki is under license. Other trademarks and trade names are those of their respective owners.

EXO DOUBLE BLACK

BLUETOOTH™ HEADPHONES
CASQUE BLUETOOTH™

USER GUIDE

OVERVIEW / CONTENTS

- Moki EXO Double Black *Bluetooth* Headphones
- USB to MicroUSB charge cable
- 3.5 mm - 3.5 mm stereo audio cable
- User Guide



CHARGING


Please charge headphones before first use

Connect the supplied charge cable to a USB port on a PC or USB charge adaptor. Confirm orientation and connect the MicroUSB to the port on your headphones.

The LED on the headphones will glow solid RED indicating the headphones are charging. Depending on the power of the charge port used, charge time will be 2-4hrs.

When headphones are fully charged the LED will turn off. Disconnect charge cable.

Note: Headphones will not work if charge cable is still connected.

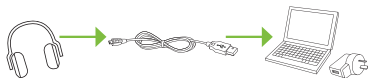

PAIR WITH BLUETOOTH DEVICES

*You must pair your Moki headphones with a **Bluetooth** device before it can be used wirelessly.*

You only need to pair your headphones to each play device once. They will automatically reconnect to each device when turned on in their vicinity. If two or more devices are available, the last device paired will be the one that reconnects.

FIRST TIME USE / PAIR TO NEW DEVICE

On your *Bluetooth* play device go to
•"Settings" >> "*Bluetooth*" - turn on *Bluetooth*

Play device should automatically start searching for new play devices. (Some older players may require you to select "search for / add new device")

•With the headphones off, HOLD the "Play / Pause button for about 5 seconds until the LED starts blinking RED / BLUE which indicates it is now searching for a new *Bluetooth* device. (If headphones do not pair with a new device within 90 seconds they will enter "Standby mode")

•On your phone or play device under "*Bluetooth*" you will see Moki EXO DB listed under "Available devices"

•Select "Moki EXO DB" on your device to pair your headphones (older devices may require a code to complete pairing. Enter "0000" if requested).

•When pairing is successful the LED on your Moki EXO Double Black *Bluetooth* Headphones will glow solid blue.

Moki headphones may be paired to PCs and laptops with *Bluetooth* capability. Go to your computers' *Bluetooth* settings and follow the prompts to connect in a similar way as described above. After pairing ensure the "Sound Output" is set to "Play through *Bluetooth*", (not "Internal Speakers"). Some computers may require *Bluetooth* audio output to be enabled each time you connect.

SPECS

Speaker diameter: ϕ 40mm
Impedance: 32 Ω
Sensitivity: 96dB @1KHz
Rated power: 3.2mW
Frequency response: 20Hz-20000Hz

Bluetooth Mode:

Bluetooth Version: Version 2.1+EDR
Remote control to the player: Volume up and down, Previous /Next, Pause/Play
Range: 10m
Frequency response: 20Hz - 20,000Hz
Play time: Approximately 8 hours
Standby time: Approximately 100 hours